


3m - series ★★★★★ECONOMY Prime

Party Tent PE

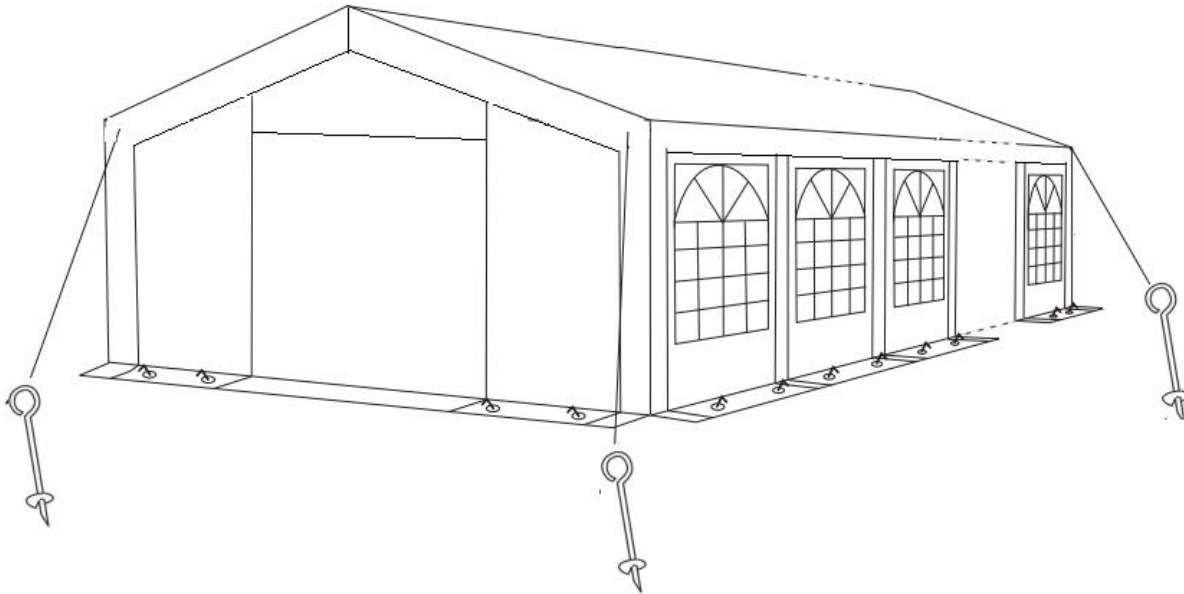

Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy winds, snowfall or ice.

Warnings

Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.

We are not responsible for damage to the unit or the contents from acts of nature.

It is always recommended that you secure your tent properly with storm straps and ground pegs when you put up the structure. Proper Anchoring system selection is your responsibility. Heavy duty Anchor are sold separately and are not included in this product.

Periodically check the anchors to ensure stability of shelter.

In case of extreme weather conditions, the tent cover must be removed.

Any shelter that is not anchored securely has the potential to fly away causing damage. We are not responsible for any shelter that blows away.

This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow or ice storms. This structure is not tested for specific snow, rain and wind loads.

Do not use open fire, welding equipment or other ignition sources in the tent.

Cleaning and Storage

3m - series ★★★★★ECONOMY Prime

A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.

Immediately remove any accumulated water, snow or ice from the roof structure.

DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

Safety Instructions

Please use gloves and stable shoes when assembling the metal frame portion of this unit. The metal components may have sharp edges and be oily cause of the metal processing.

Snow must be removed from the tarpaulin in a timely manner. Temporary accommodation as tents should be taken down in adverse weather condition like heavy wind, snowfall and ice.

Ensure sufficient distance of the tarpaulin to heat sources, electrical-, gas- and other pipes (min. 1.2m). You can obtain detailed information from your responsible authority.

Pay attention to the following points when choosing a location:

The pavilion must stand on a flat, non-slip and safe place

choose a sheltered location

Avoid damage to the material, please place the pavilion so that it cannot rub or chafe on branches, parts of buildings etc.

Put up the pavilion at a safe distance to fire places and pay attention to the direction of the wind

Leave your pavilion to dry in an erected position before packing it away.


Assembly Instructions

3m - series ★★★★★ECONOMY Prime

Step1. Assembly is easiest if you layout all parts on the ground as shown below. 2 meter per section, e.g. 3x2m has 1 section, 3x4m has 2 sections, 3x6m has 3 sections, 3x8m has 4 sections and 3x10m has 5 sections.

Assemble the roof frame by mounting parts 4 and 5 on the pipes (parts 1, 2).


Use the bolts(10) and wing nuts(12) to attach the parts.

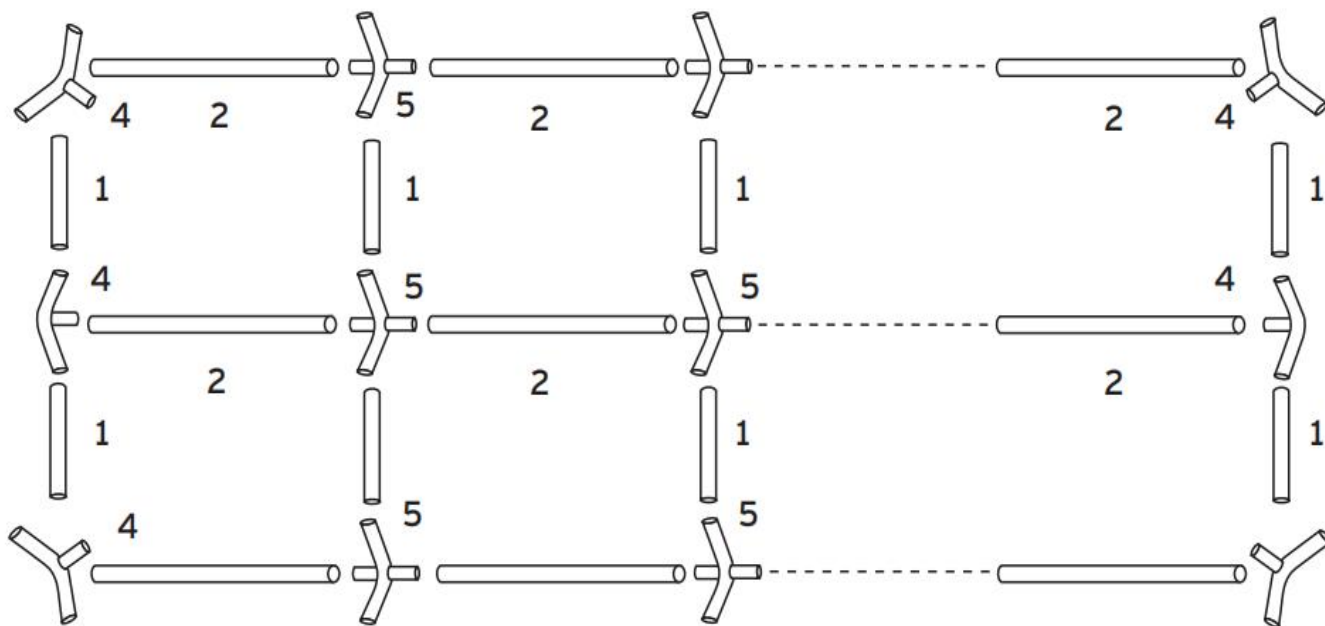

3m - series ★★★★★ECONOMY Prime

Step2. Lift one side of the tent frame and attach the legs (3). Place the roof (15) onto the frame and use the long bungees (9) to fasten it.


Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.

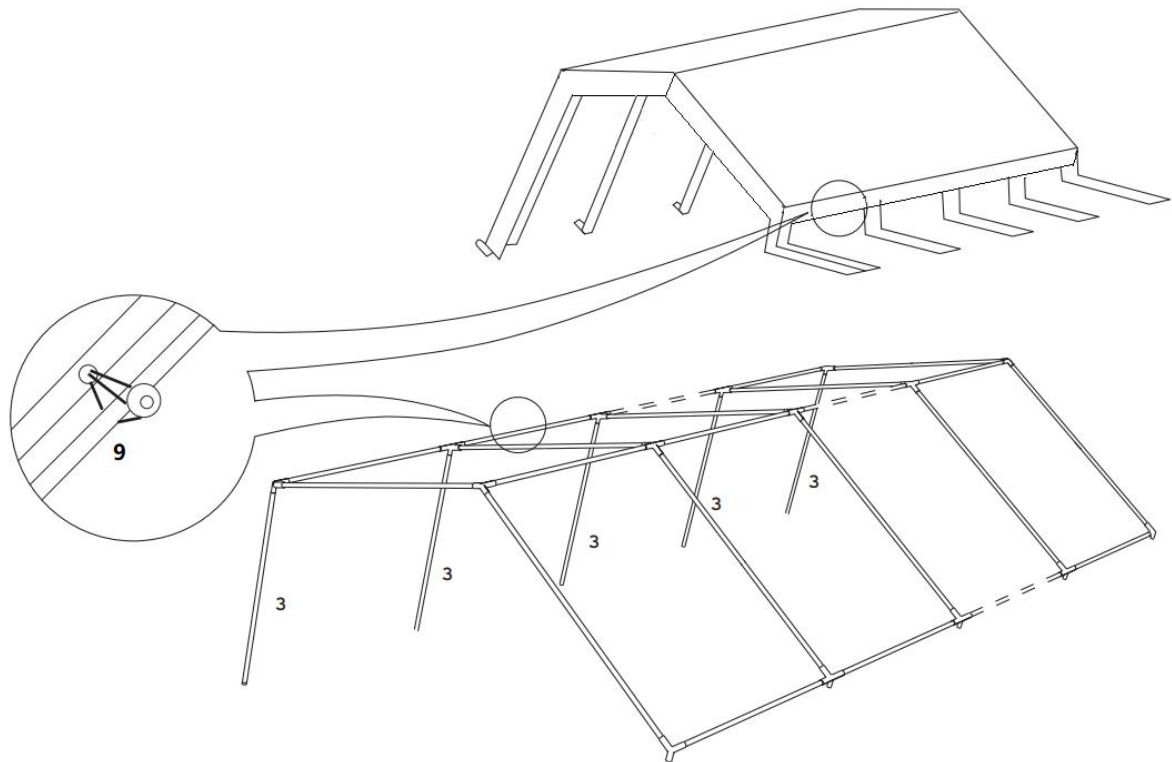

3m - series ★★★★★ECONOMY Prime

Step 3. Attach the legs on the other side. Make sure, that the leg pipes are in vertical position, to avoid overtention on the end walls.

Use the long ground pegs (7) to fasten the feet to the ground. Attach the side covers to the pipes (4) using hooks (13).

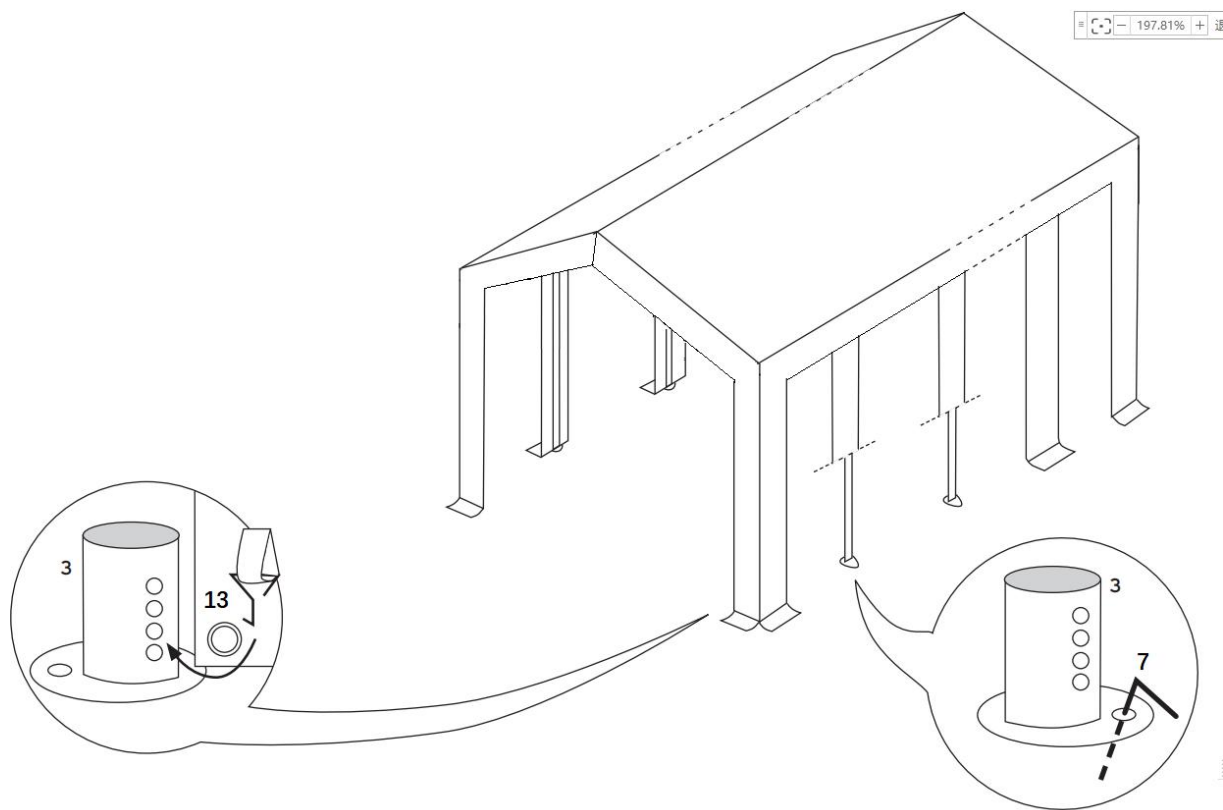


3m - series ★★★★★ECONOMY Prime

 
 
 
 
 

 





 
Step 4. Unfold the side walls (16) and the end walls (17) and attach the side walls and end walls to the frame using the bungees (9).

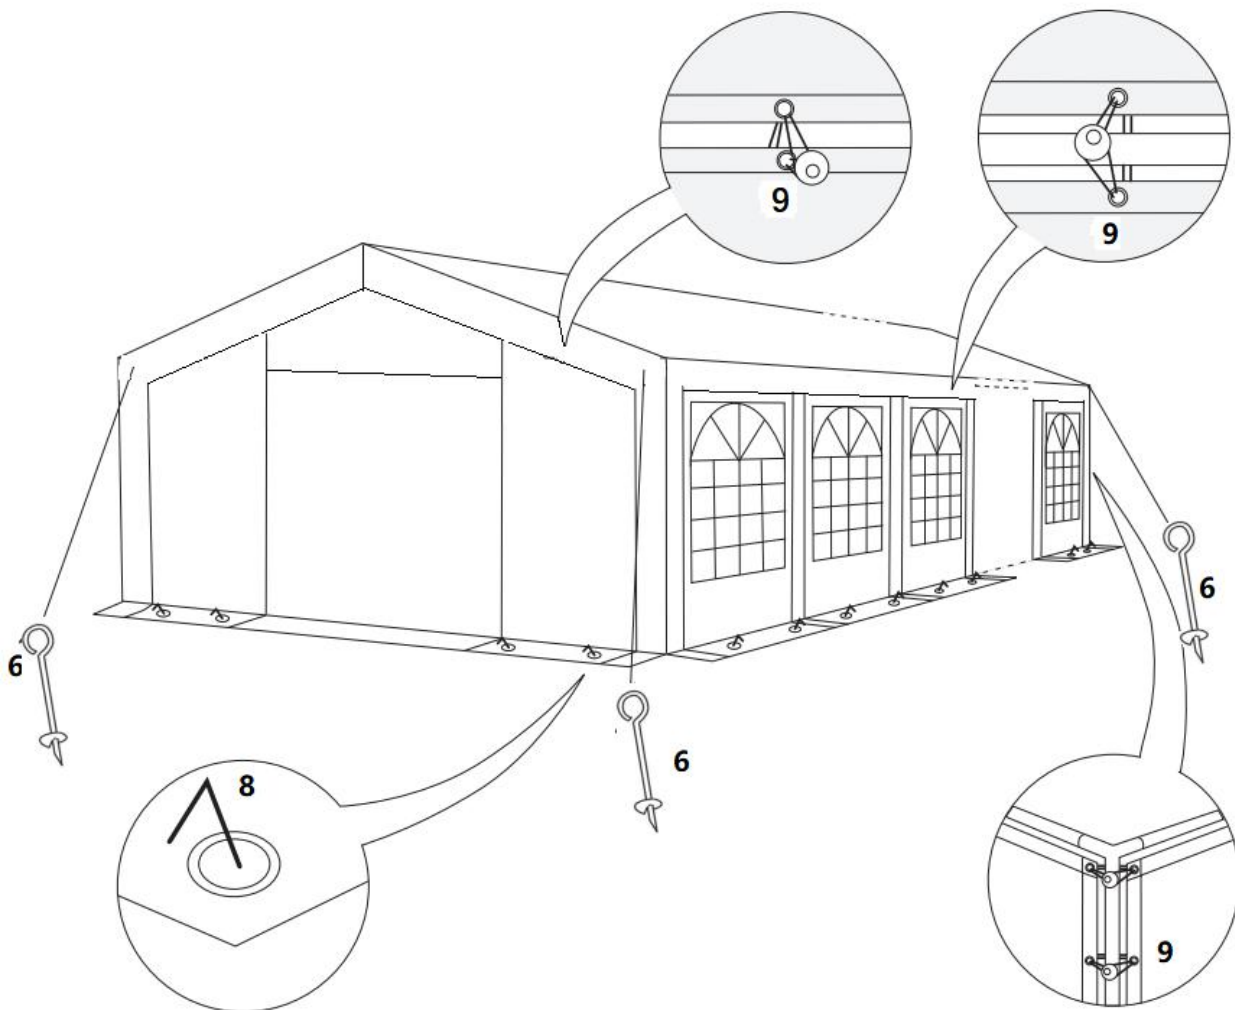Use the short ground pegs (8) to fasten the end walls to the ground.

 

 

The guy rope runs from every corner of the tent and is braced to the ground using the spiral pegs(6).



3m - series ★★★★★ECONOMY Prime

Parts List		Quantity					
Item	Design	3x2m	3x4m	3x6m	3x8m	3x10m	3x12m
(1) Pole 1542mm		4	6	8	10	12	14
(2) Pole 1930mm		3	6	9	12	15	18
(3) leg pole 1898mm		4	6	8	10	12	14
(4) Connector 4		6	6	6	6	6	6
(5) Connector 5			3	6	9	12	15
(6) Spiral peg		4	4	4	4	4	4
(7) Long peg - 6x180mm		4	6	8	10	12	14
(8) Short peg - 4x180mm		16	22	28	34	40	46
(9) Long bungee		44	62	80	98	116	134
(10) Wing nut		18	30	42	54	66	78
(11) Guy rope 3m		4	4	4	4	4	4
(12) Bolt with		18	30	42	54	66	78
(13) Hook		4	6	8	10	12	14

3m - series ★★★★★ECONOMY Prime

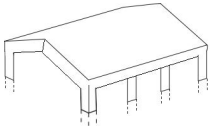(14) Spanner		1	1	1	1	1	1
(15) Roof		1	1	1	1	1	1
(16) Side wall		2	4	6	8	10	12
(17) End wall		2	2	2	2	2	2



U K T E N T S . C O M