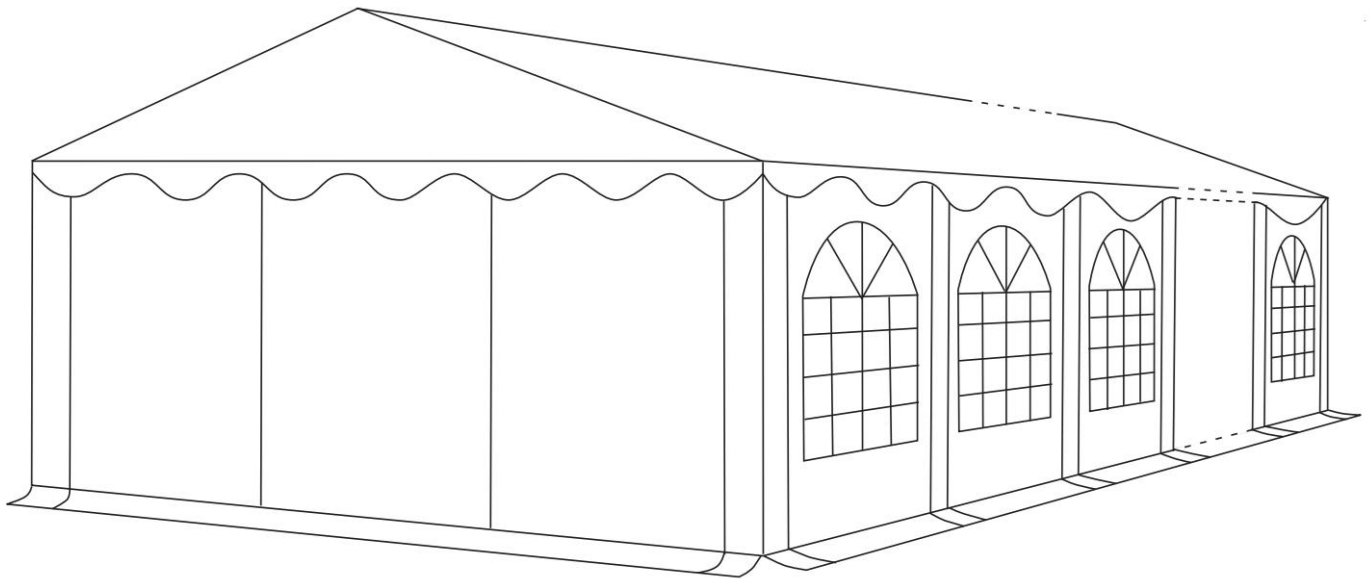


6m - series ★★★★★CLASSIC Prime

Party Tent



Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy

Warnings

Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent has the sole responsibility to make sure that these local rules are followed and that the mounting is correct.

We are not responsible for damage to the unit or the contents from acts of nature.

It is always recommended that you secure your tent properly with storm straps and ground pegs when you put up the structure. Proper Anchoring system selection is your responsibility. Heavy duty Anchor are sold separately and are not included in this product.

Periodically check the anchors to ensure stability of shelter.

In case of extreme weather conditions, the tent cover must be removed.

Any shelter that is not anchored securely has the potential to fly away causing damage. We are not responsible for any shelter that blows away.

This canopy is intended to protect against the effects of sun, rain, light snow, etc. It is not designed to hold the loads that can accompany wind, rain, snow or ice storms. This structure is not tested for specific snow, rain and wind loads.

Do not use open fire, welding equipment or other ignition sources in the tent.

Cleaning and Storage

A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.

Immediately remove any accumulated water, snow or ice from the roof structure.

DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

6m - series ★★★★★CLASSIC Prime

Safety Instructions

Please use gloves and stable shoes when assembling the metal frame portion of this unit. The metal components may have sharp edges and be oily cause of the metal processing.

Snow must be removed from the tarpaulin in a timely manner. Temporary accommodation as tents should be taken down in adverse weather condition like heavy wind, snowfall and ice.

Ensure sufficient distance of the tarpaulin to heat sources, electrical-, gas- and other pipes (min. 1.2m). You can obtain detailed information from your responsible authority.

Pay attention to the following points when choosing a location:

The pavilion must stand on a flat, non-slip and safe place

choose a sheltered location

Avoid damage to the material, please place the pavilion so that it cannot rub or chafe on branches, parts of buildings etc.

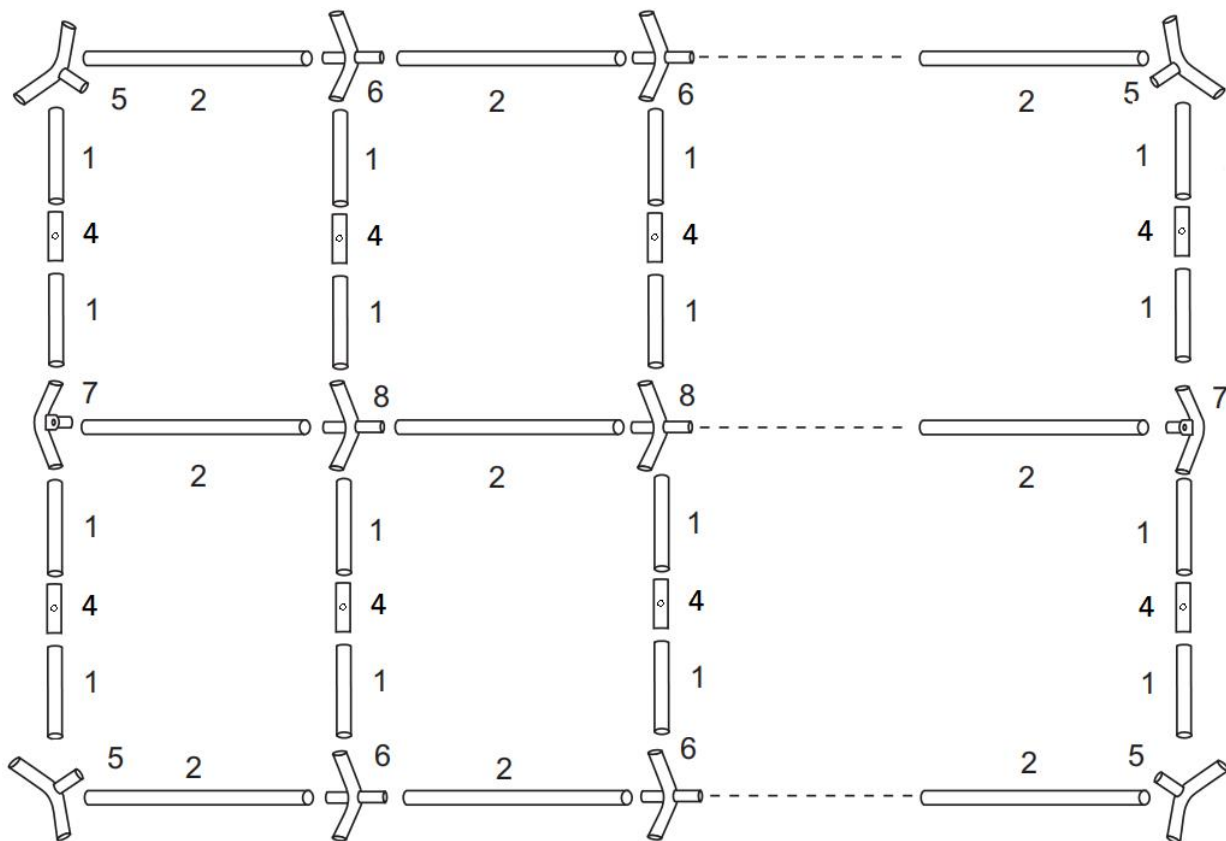
Put up the pavilion at a safe distance to fireplaces and pay attention to the direction of the wind

Leave your pavilion to dry in an erected position before packing it away.

Assembly Instructions


Step1. Assembly is easiest if you layout all parts on the ground as shown below. 6x6m has 3 section, 6x8m 4 sections, 6x10m has 5 sections and 6x12 has 6 sections.

Assemble the roof frame by mounting parts 4 to 8 on the pipes (parts 1 and 2). Use the bolts(9) to attach the parts.




6m - series ★★★★★CLASSIC Prime

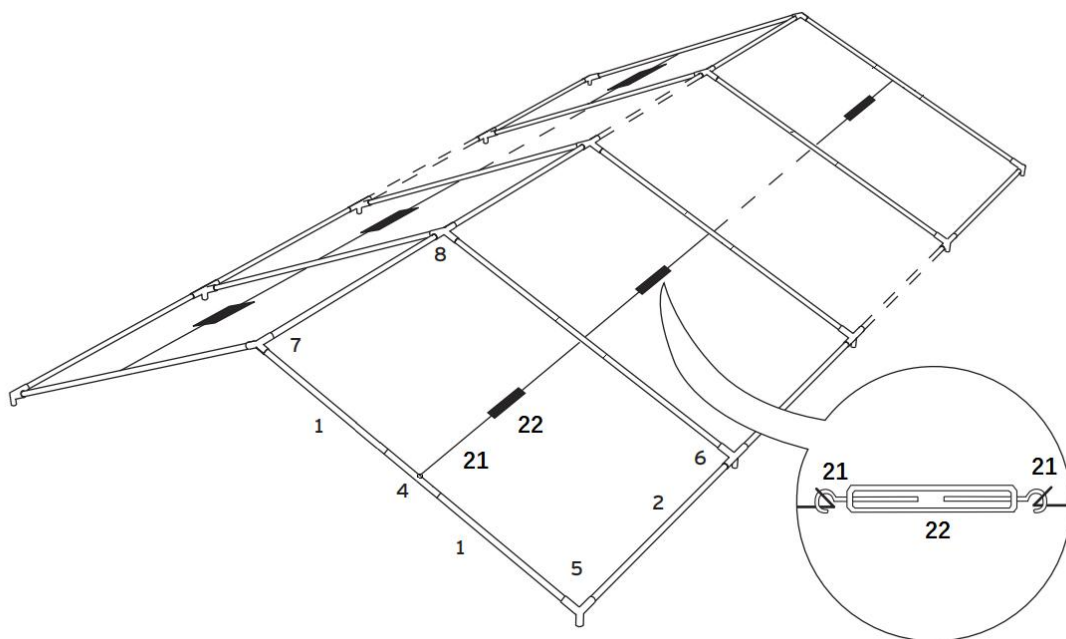Step 2. Use the turn buckle(22) and the wire rope(22) to stabilize the roof structure.



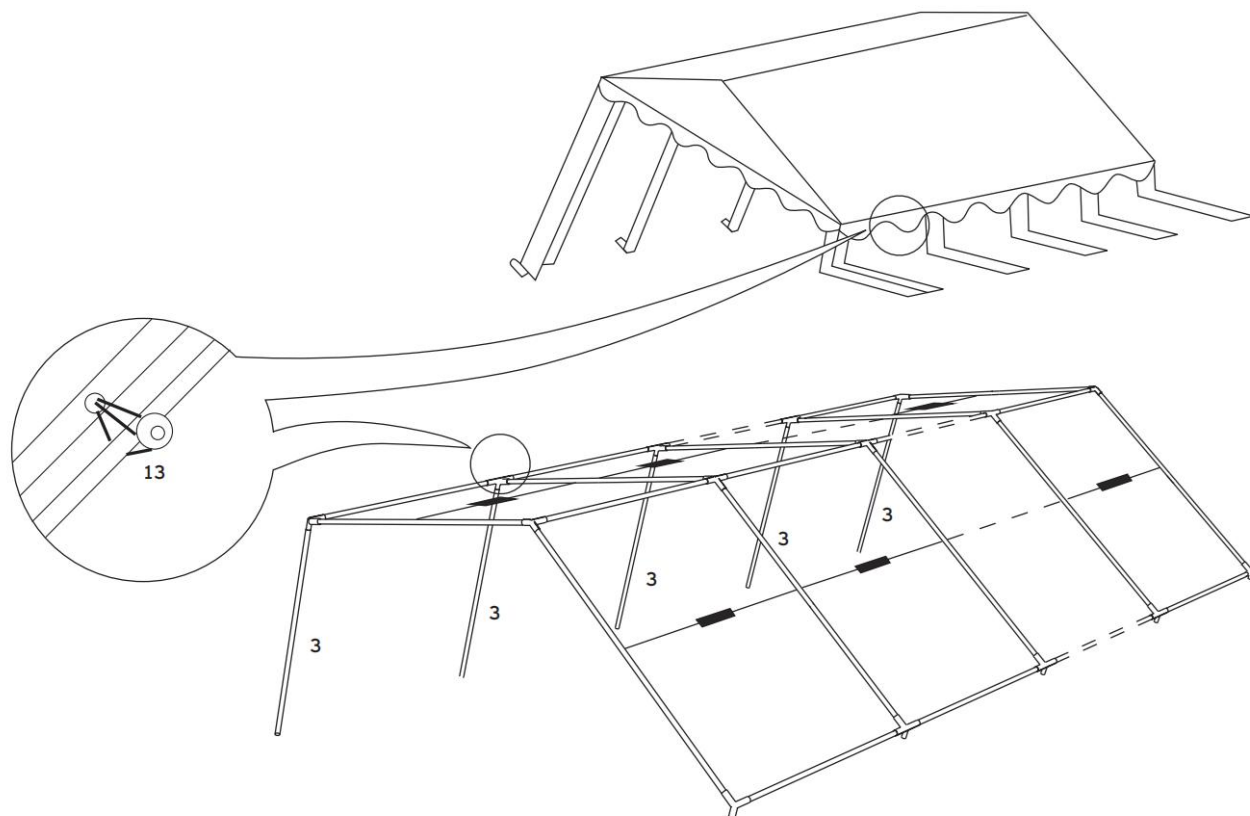
Step 3. Lift one side of the tent frame and attach the legs (3). Place the roof (18) onto the frame and use the bungees (13) to fasten it. Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.



6m - series ★★★★★CLASSIC Prime

Step 4. Attach the legs on the other side. Make sure, that the leg pipes are in vertical position, to avoid overtension on another side.

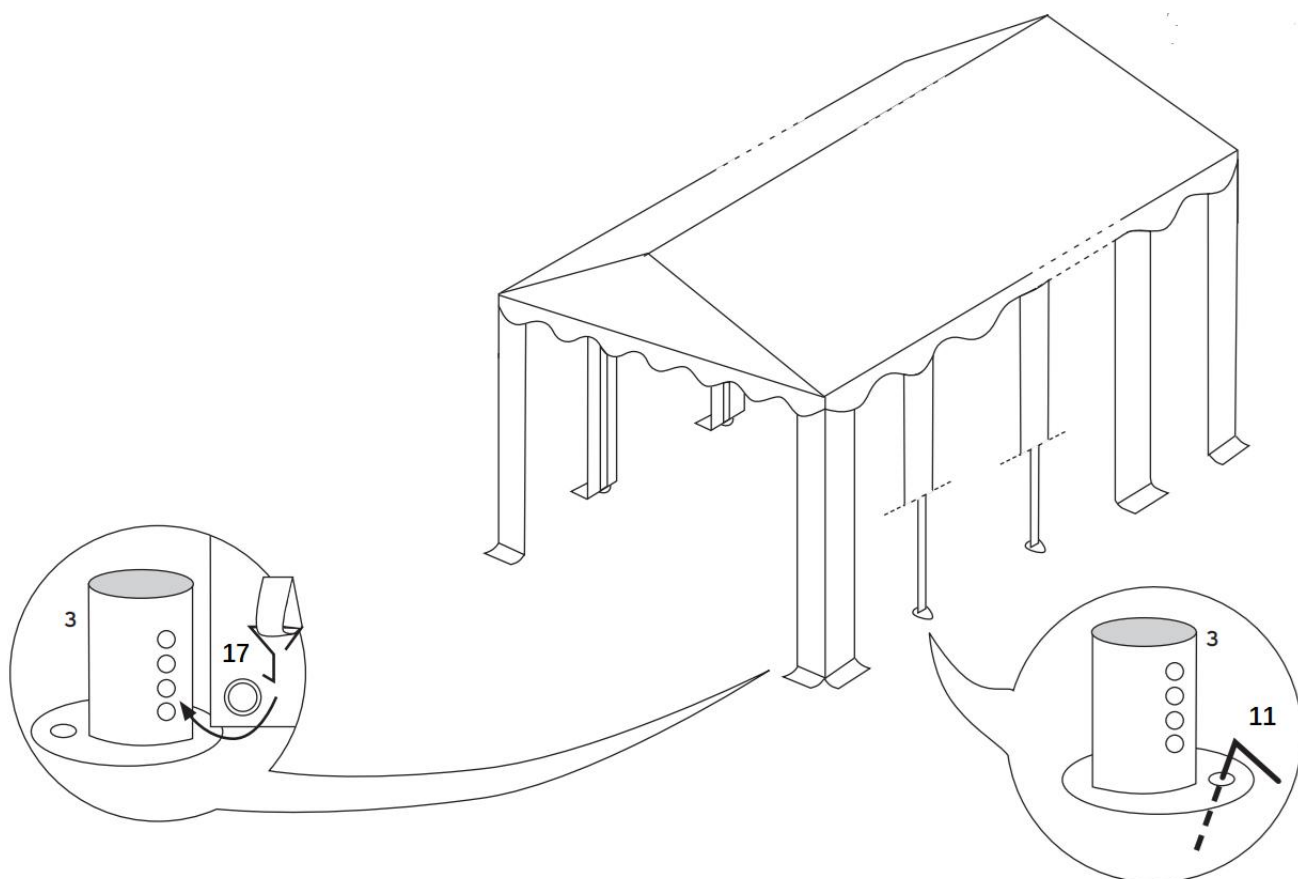
Use the big ground pegs (11) to fasten the legs to the ground. Attach the side covers to the pipes (3) using hooks (17).









6m - series ★★★★★CLASSIC Prime

Step 5. Unfold the side walls (19) and the end walls (20) and attach the side walls to the frame using the bungees (13). Attach the end walls directly to the roof using the short bungees (14). Use the small ground pegs (12) to fasten the end walls to the ground.



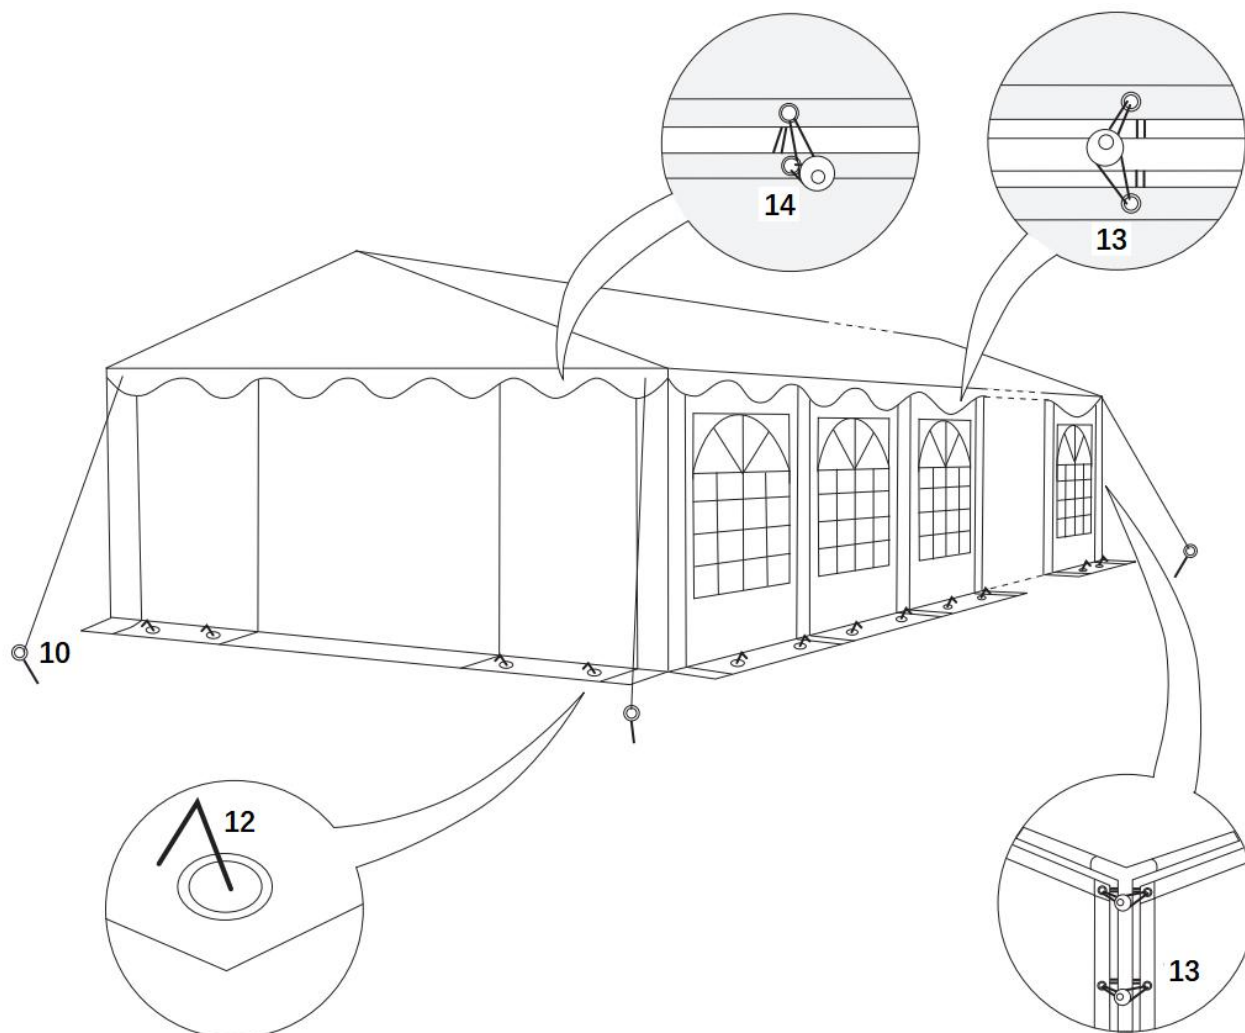
The guy rope runs from every corner of the tent and is braced to the ground using the Spiral peg (10).



6m - series ★★★★★CLASSIC Prime

      Parts List			Quantity				
No.	Name	Drawing	6x6m	6x8m	6x10m	6x12m	6x14m
1	Rafter Poles 1442mm		16	20	24	28	32
2	Cross Poles 1930mm		9	12	15	18	21
3	Leg pole 1898mm		8	10	12	14	16
4	Connecting Pole 500mm		8	10	12	14	16
5	3-way-corner 110° (Leg connector)		4	4	4	4	4
6	4-way-corner 110°(Leg connector)		4	6	8	10	12
7	3-way-corner 140° (roof connectors)		2	2	2	2	2
8	4-way-corner 140°(roof connectors)		2	3	4	5	6
9	Bolt with wing nut		58	74	90	106	122
10	Spiral peg		4	4	4	4	4
11	Big ground Peg 6x180mm		8	10	12	14	16
12	Small ground Peg 4x180mm		28	34	40	46	52
13	Long Bungee Balls		92	110	128	146	164
14	Short Bungee Balls		26	26	26	26	26

   6m - series ★★★★★CLASSIC Prime

15	Guy rope 3m		4	4	4	4	4
16	Spanner		1	1	1	1	1
17	Hook		8	10	12	14	16
18	Roof		1	1	1	1	1
19	Side wall		6	8	10	12	14
20	End wall		2	2	2	2	2
21	Wire rope		12	16	20	24	28
22	Turn buckle		6	8	10	12	14



U K T E N T S . C O M