

This high-quality tent is flame retardant and therefore can be used for public events. PVC cover according:



FIRE RESISTANT IGNIFUG FEUERSICHER EN – 13501-1

MULTINATIONAL ACCEPTANCE

RO, BG, HU, GR, SRB, MD, D, A, F, GB, IRL, I, E, PL, NL, P, B, CZ, HR, DK, SE, SK, FIN, LT, LV, EST, L

VALID REPLACEMENT

D DIN 4101 - B1/B2 DK, S, N SIS 650082 I UNI 8456 CH BKZ 5.2 F NF P 92 - M2

Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy winds, snow fall or ice.

Important Warnings – Please Read Carefully

- **Check Local Rules:** Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent is solely responsible for ensuring compliance and proper mounting.
- Weather Damage: We are not responsible for any damage to the unit or its contents caused by acts of nature.
- **Secure Your Tent:** Always use storm straps and ground pegs when setting up the structure. Choosing the correct anchoring system is your responsibility.



(Please note: Heavy-duty anchors are sold separately and are not included with this product.)

- Regular Checks: Periodically check the anchors to ensure the shelter remains stable.
- Extreme Weather: In case of extreme weather conditions, remove the tent cover immediately.
- **Flying Tents:** Any shelter that is not anchored securely may fly away and cause damage. We are not responsible for any shelter that blows away.
- **Designed for Mild Weather:** This canopy is intended to protect against sun, rain, and light snow only. It is not designed to withstand the loads from wind, heavy rain, snow, or ice storms. This structure has not been tested for specific snow, rain, or wind loads.
- No Fires: Do not use open flames, welding equipment, or any other ignition sources inside the tent.

Cleaning and Storage

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.
- Immediately remove any accumulated water, snow or ice from the roof structure.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

Safety & Setup Guidelines

- **Wear Protective Gear:** Always use gloves and stable shoes when assembling the metal frame. The components may have sharp edges or be oily due to the manufacturing process.
- Snow Removal: Remove snow promptly from the tarpaulin to avoid overloading the structure.
- Adverse Weather: Temporary tents should be taken down in the event of heavy wind, snowfall, or ice to prevent damage or injury.
- **Keep Away from Heat:** Maintain a minimum distance of 1.2 meters between the tarpaulin and any heat sources, electrical, gas, or other utility pipes.
- Check Local Regulations: You can obtain detailed location and safety information from your local authority.
- **Dry Before Storage:** Always allow the pavilion to fully dry in an upright position before packing it away to prevent mold or material degradation.

Choose a Safe Location:

- Put the tent on a flat, non-slippery surface.
- Try to choose a spot that is protected from wind.
- Make sure the tent isn't rubbing against trees, walls, or anything sharp.
- Keep the tent away from fires and think about which way the wind blows.
- Let the tent dry out fully before you pack it away






Assembly Instructions


Step 1.

• Assembly is easiest if you layout all parts on the ground as shown below. 2 meter per section, e.g. 4x4m has 2 sections, 4x6m has 3 sections, 4x8m has 4 sections, 4x10m has 5 sections and 4x12m has 6 sections.

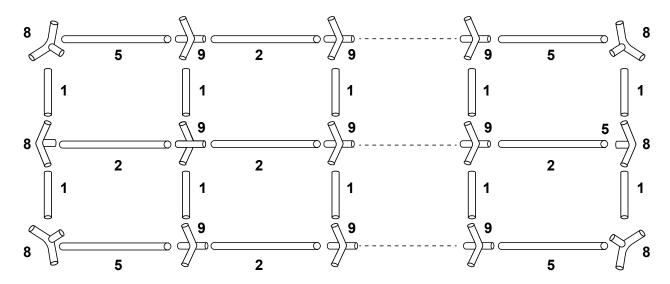

Step 2 & 3.


- Connect the roof poles and connectors from middle and out. To ensure the bolts (18,19) fixedtoevery pole tightly.
- Use the turnbuckle (25) and wire rope(24) to stabling the roof structure. Attach the roof braces (7) to the pipe (1) using the clamp (26).

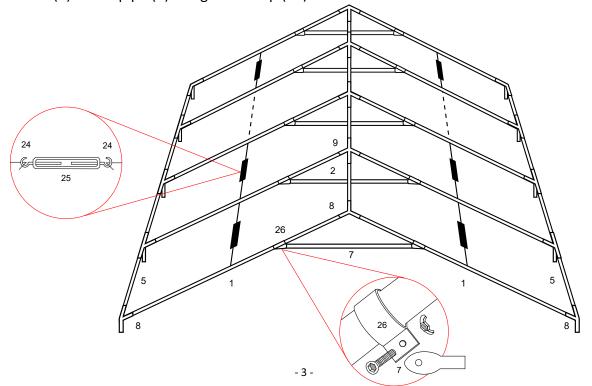



Step 4.

• Put the roof cover (28) on the frame and insert leg poles (3,4) into one side as shown below. Lift the opposite site of the frame and insert remaining leg poles to finish the tent framework.

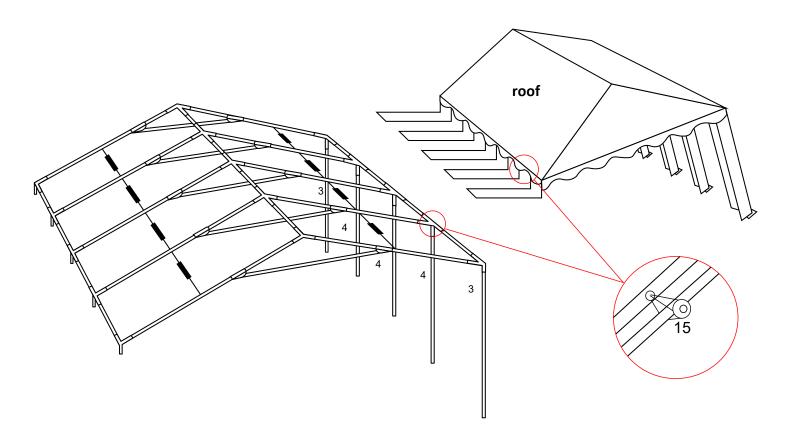


Step 5.

• Use the leg pegs (13) to secure the legs to the ground. Use the hooks (22) to secure the leg cover to the leg poles.






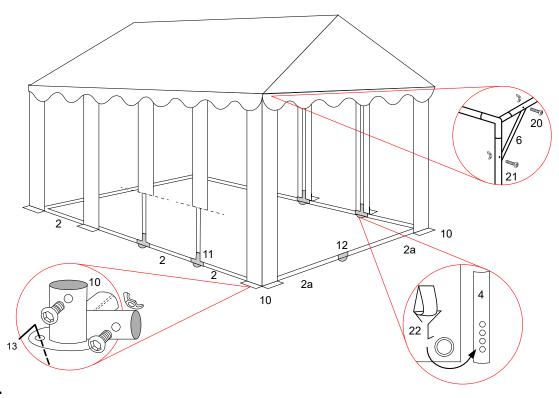

Step 6 & 7.

- Attach side panels (29) and end panels (30) to the frame and roof with bungee balls (15,16) as shown.
- Caution: Safety Goggles must be worn when secure the bungees.
- Use the thin pegs (14) to secure the side panels and end panels to the groundas show below. The guy lines (17) clasp to each corner of tent and another end of line secure to the ground by tube pegs(27).

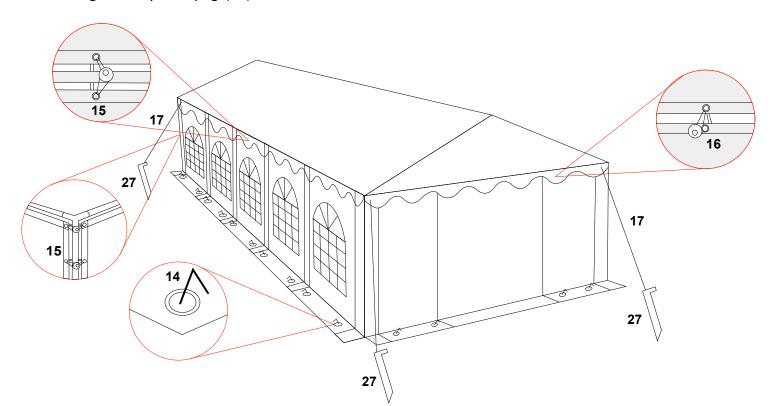



TENTS U K T E N T S . C O M

Parts List		Quantity				
ltem	Design	4x4m	4x6m	4x8m	4x10m	4x12m
No.1 Pole 50x2040mm	0 0	6	8	10	12	14
No.2 Pole 38x1920mm		6	11	16	21	26
No.2a ground bar 38x1895mm		4	4	4	4	4
No.3 leg pole 50x1888mm	()o oooo o)	4	4	4	4	4
No.4 leg pole 50x1888mm	()0 0000 0)	2	4	6	8	10
No.5 pole 38x1920mm	0 0	4	4	4	4	4
No.6 brace 1174mm	0 0	4	4	4	4	4
No.7 brace 1652mm	00	3	4	5	6	7
No. 8 120° 3-way joint		6	6	6	6	6
No. 9 120° 3-way joint		3	6	9	12	15
No.10 120° 3-way joint		4	4	4	4	4
No. 11 120° 3-way joint		2	4	6	8	10



TENTS UKTENTS.COM

No. 12 120° 3-way joint	2	2	2	2	2
No.13 Leg peg 6x180mm	 6	8	10	12	14
No.14 Thin peg 4x180mm	 22	28	34	40	46
No.15 Long bungee	106	128	150	172	194
No.16 Short bungee	18	18	18	18	18
No.17 Guy line 3m	4	4	4	4	4
No.18 M8x50mm Bolt with Wing nut	28	38	48	58	68
No.19 M8x70mm Bolt with Wing nut	26	34	42	50	58
No.20 M6x45mm Bolt with Wing nut	4	4	4	4	4
No.21 M6x60mm Bolt with Wing nut	4	4	4	4	4
No.22 Hook.	6	8	10	12	14
No.23 Allen Key M6	1	1	1	1	1
No.23-1 Allen Key M8	1	1	1	1	1
No.24 Wire rope	 8	12	16	20	24
No.25 Turn-buckle	4	6	8	10	12



TENTS

No.26 Clamp with bolt M6X30mm	6	8	10	12	14
No.27 Tube peg	4	4	4	4	4
No.28 Roof	1	1	1	1	1
No.29 Side wall	4	6	8	10	12
No.30 End wall	2	2	2	2	2

