


#### **Party Tent**

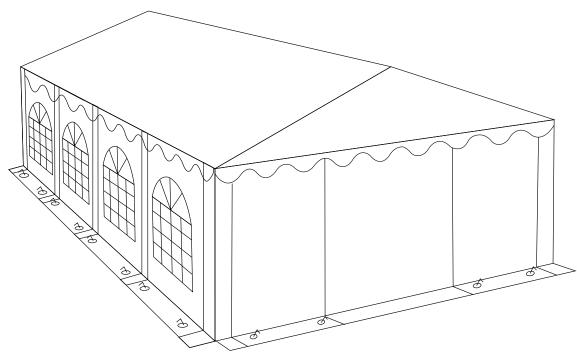

This high-quality tent is flame retardant and therefore can be used for public events. PVC cover according:



FIRE RESISTANT IGNIFUG FEUERSICHER EN – 13501-1

#### **MULTINATIONAL ACCEPTANCE**

RO, BG, HU, GR, SRB, MD, D, A, F, GB, IRL, I, E, PL, NL, P, B, CZ, HR, DK, SE, SK, FIN, LT, LV, EST, L

#### **VALID REPLACEMENT**

D DIN 4101 - B1/B2 DK, S, N SIS 650082 I UNI 8456 CH BKZ 5.2 F NF P 92 - M2

Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy winds, snow fall or ice.

#### Important Warnings - Please Read Carefully

- **Check Local Rules:** Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent is solely responsible for ensuring compliance and proper mounting.
- Weather Damage: We are **not responsible** for any damage to the unit or its contents caused by acts of nature.
- **Secure Your Tent:** Always use storm straps and ground pegs when setting up the structure. Choosing the correct anchoring system is your responsibility.



(Please note: Heavy-duty anchors are sold separately and are not included with this product.)

- Regular Checks: Periodically check the anchors to ensure the shelter remains stable.
- Extreme Weather: In case of extreme weather conditions, remove the tent cover immediately.
- **Flying Tents:** Any shelter that is not anchored securely may fly away and cause damage. We are not responsible for any shelter that blows away.
- **Designed for Mild Weather:** This canopy is intended to protect against sun, rain, and light snow only. It is not designed to withstand the loads from wind, heavy rain, snow, or ice storms. This structure has not been tested for specific snow, rain, or wind loads.
- No Fires: Do not use open flames, welding equipment, or any other ignition sources inside the tent.

#### **Cleaning and Storage**

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.
- Immediately remove any accumulated water, snow or ice from the roof structure.
- DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

#### **Safety & Setup Guidelines**

- **Wear Protective Gear:** Always use gloves and stable shoes when assembling the metal frame. The components may have sharp edges or be oily due to the manufacturing process.
- Snow Removal: Remove snow promptly from the tarpaulin to avoid overloading the structure.
- Adverse Weather: Temporary tents should be taken down in the event of heavy wind, snowfall, or ice to prevent damage or injury.
- **Keep Away from Heat:** Maintain a minimum distance of 1.2 meters between the tarpaulin and any heat sources, electrical, gas, or other utility pipes.
- Check Local Regulations: You can obtain detailed location and safety information from your local authority.
- **Dry Before Storage:** Always allow the pavilion to fully dry in an upright position before packing it away to prevent mold or material degradation.

#### **Choose a Safe Location:**

- Put the tent on a flat, non-slippery surface.
- Try to choose a spot that is protected from wind.
- Make sure the tent isn't rubbing against trees, walls, or anything sharp.
- Keep the tent away from fires and think about which way the wind blows.
- Let the tent dry out fully before you pack it away




#### **Assembly Instructions**

#### Step 1.


- Assembly is easiest if you layout all parts on the ground as shown below. 5x6m has 3 sections,
   5x8m 4 sections, 5x10m has 5 sections, 5x12 has 6 sections and a 5x14m has 7 sections.
- Assemble the roof frame by mounting parts 9 to 15 on the pipes (parts 1, 2, and 3). Use the bolts 22 and 23 to attach the parts.

Note: No.9 at left corner, No.10 at right corner.

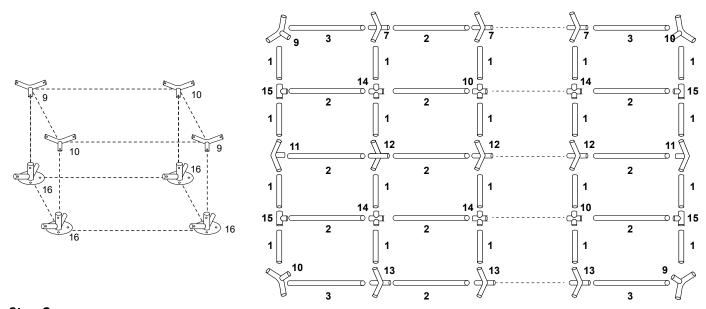

#### Step 2.


• Connect the roof poles and connectors from middle and out. Attach the reinforcement braces (parts 4 and 5) using bolts (24) and wing nuts (27).

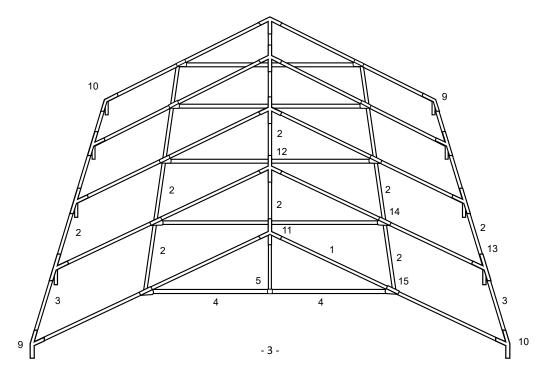



#### Step 3.

• Lift one side of the tent frame and attach the legs (7 and 8). Place the roof (34) onto the frame.

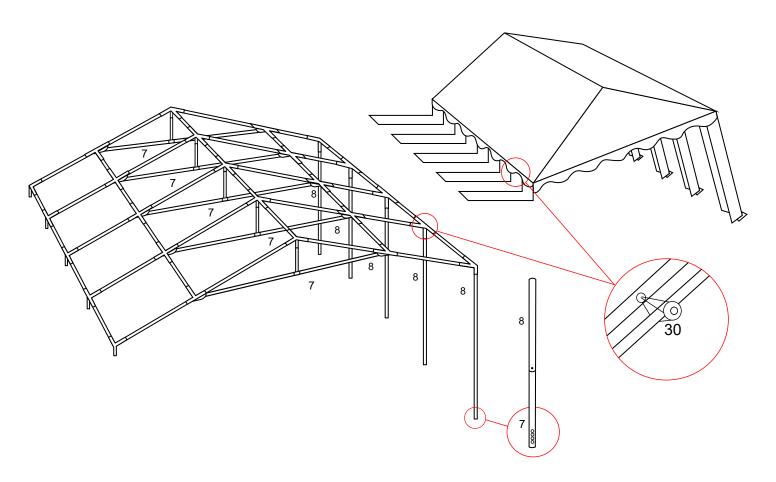


#### Step 4.

• Attach the legs on the other side and install the feet (16, 17) at the bottom. Make sure, that the leg pipes are in vertical position, to avoid overtention on the end walls. Attach the side covers to the pipes (7) using hooks (33). Reinforce the side frame by attaching the diagonal pipes (6) to all four corners. Completethe bottom frame with the required pipes (2a) and connector (18). Use the long ground pegs (19) to fasten the feet to the ground.






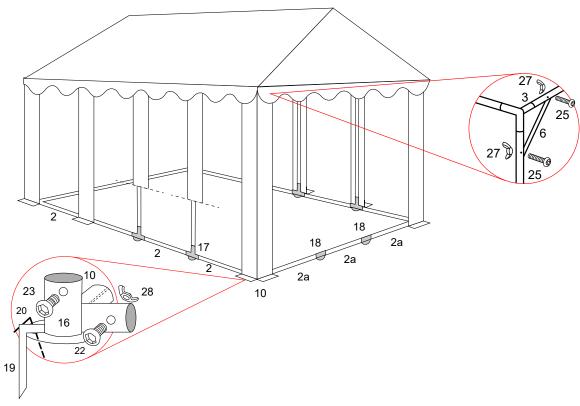

• Unfold the side walls (35) and the end walls (36) and attach the side walls to the frame using the bungees (30). Attach the end walls directly to the roof using the short bungees (31). Use the short ground pegs (21) to fasten the end walls to the ground. The guy rope (32) runs from every corner of the tent and is braced using the tube pegs (19).

Step 5.

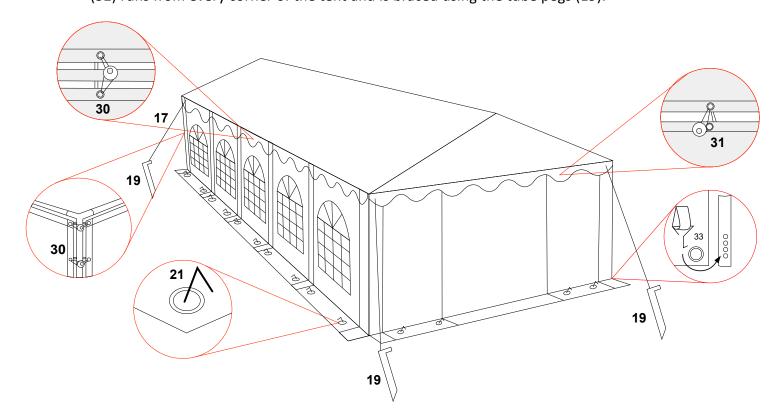



## TENTS U K T E N T S . C O M

Parts List			Quantity									
Part No.	Drawing	5x6	5x8	5x10	5x12	5x14	5x16	5x18	5x20			
No. 1 50x1430mm frame pole	()0	16	20	24	28	32	36	40	44			
No. 2 38x1920mm frame bar	()0 0)	17	24	31	38	45	52	59	66			
No. <b>2a</b> 38x1580mm frame bar	()0	6	6	6	6	6	6	6	6			
No. 3 38x1920mm frame pole	()0 0 0)	4	4	4	4	4	4	4	4			
No. 4 25x1225mm roof brace	0 0	8	10	12	14	16	18	20	22			
No. 5 25x440mm Roof brace	©	4	5	6	7	8	9	10	11			
No. 6 25x1174mmm diagonal brace	©	4	4	4	4	4	4	4	4			
No. 7 50x1307mm pole	()00 0000()	8	10	12	14	16	18	20	22			
No. 8 50x1283mm pole	0 0 0	8	10	12	14	16	18	20	22			
No. 9 110° 3-way joint		2	2	2	2	2	2	2	2			
No. 10 110° 3-way joint		2	2	2	2	2	2	2	2			
No. 11 140° 3-way joint		2	2	2	2	2	2	2	2			
No. 12 140° 4-way joint		2	3	4	5	6	7	8	9			

# 5m \* \* \* \* \* \* series Elite - 2,6m

## TENTS U K T E N T S . C O M

No. 13 110° 4-way joint	4	6	8	10	12	14	16	18
No. 14 cross 4-way joint	4	6	8	10	12	14	16	18
No. 15 "T" 3 way joint	4	4	4	4	4	4	4	4
No. 16 3-way joint	4	4	4	4	4	4	4	4
No. 17 3-way joint	4	6	8	10	12	14	16	18
No. 18 2-way joint	4	4	4	4	4	4	4	4
No. 19 Tube peg	 8	10	12	14	16	18	20	22
No. 20 Long peg 8x300mm	 8	10	12	14	16	18	20	22
No. 21 Short peg 4x180mm	 28	34	40	46	52	58	64	70
No. 22 M8x50mm Bolt	54	68	82	96	110	124	138	152
No. 23 M8x70mm Bolt	56	82	98	114	130	146	162	178
No. 24 M6x30 Bolt	16	20	24	28	32	36	40	44
No. 25 M6x45 Bolt	4	4	4	4	4	4	4	4
No. 26 M6x60 Bolt	4	4	4	4	4	4	4	4

## 5m ★ ★ ★ ★ ★ series Elite - 2,6m

### TENTS

No. 27 M6 Wing nut	24	28	32	36	40	44	48	52
No. 28 M8 Wing nut	130	150	180	210	240	270	300	330
No. 29 Allen Key M8	2	2	2	2	2	2	2	2
No. 30 Long bungee	132	154	176	198	220	242	264	286
No. 31 Short bungee	22	22	22	22	22	22	22	22
No. 32 Guy rope 5m	4	4	4	4	4	4	4	4
No. 33 Hook	8	10	12	14	16	18	20	22
No. 34 Roof	1	1	1	1	1	1	1	1
No.35 Side wall	6	8	10	12	14	16	18	20
No. 36 End wall	2	2	2	2	2	2	2	2
No. 37 Allen Key M6	1	1	1	1	1	1	1	1

